




Your Buddycompass:

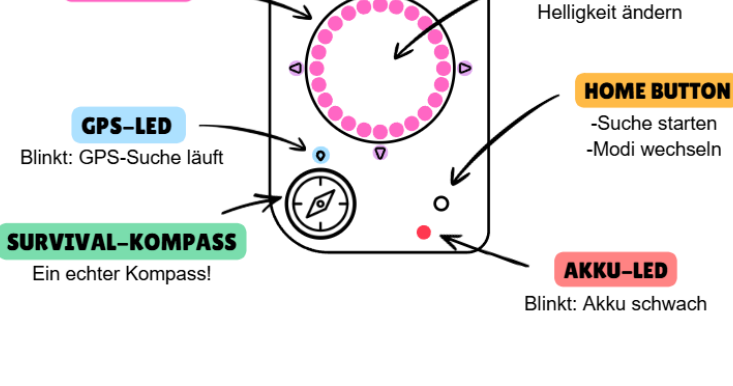

Getting Started:

Step 1: Turn on the device

Press and hold the **Home and Center-Buttons** at the same time for 3 seconds. The LEDs will light up, and your Buddycompass is now on.

If you don't use the device for a while, the LEDs will turn off again—but don't worry, the device is still on. Just press the **Home-Button** again to wake it up.

Step 2: Pair Devices

Do this with all your Buddies in your group at the same time.

- 1) Press and hold the **Center-Button** for 5 seconds to enter pairing mode.
- 2) Select your color using the **Center-Button** (each Buddy must choose their own unique color).
- 3) Now pair with the other Buddies one by one by clicking the **Home-Button**. Your color should now be visible on the other devices' screens.

Press and hold the **Home-Button** to save everything and exit the mode.

By the way, your Buddies will stay paired even if you turn off your Buddycompass or the battery runs out.




Step 3: Find your friends!

Now you can find your Buddies anytime, anywhere. Just take your Buddycompass with you, and you'll always be easy to find. (If you ever want some peace and quiet, you can simply turn off your Buddycompass by pressing and holding the Home and Center-Buttons at the same time for 3 seconds.)

You can find out exactly how to find your Buddies in the **Search-Mode** below.

Search-Mode (Outdoors Only):

⚠ **Important:** Your Buddycompass works best outdoors! When you turn on the Buddycompass for the first time, it may take up to 10 minutes for the GPS to find a signal. Indoors, it takes longer and the GPS isn't as accurate...

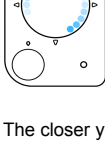


Click the **Home-Button** to start the search. Your LED ring will then begin to rotate. Your Buddycompass now simultaneously sends a search signal to all paired Buddies. As soon as you receive a Buddy's location, your LED ring will show you their direction and distance using the corresponding colors.

The closer you are to your Buddies, the more LEDs light up:



⚠ **Important:** Hold the device flat in your hand (like a real compass) so that the direction indicator works properly.

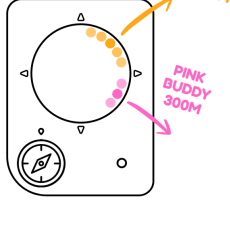

Note: Locations are always updated in real time. This means your LED ring will always point in the direction of your Buddies' current location, even if they're on the move.

→ Click the **Home-Button** to exit Search-Mode.

Pro Tip (For groups with more than two Buddies): By default, all directions are displayed simultaneously on the LED ring. However, you can switch to Single-Buddy Mode by holding down the **Center-Button**. Then, only one direction is displayed at a time (you can tell which one by the color of the outer LEDs). Simply hold down the **Center-Button** to cycle through your Buddies or return to All-Buddy Mode (the outer LEDs will then light up white again).

⚠ Important:

• Outdoor use: Your Buddycompass needs a clear view of the sky for the GPS to work. The more concrete there is above you, the less accurate the signal becomes... • In Search-Mode, the GPS LED flashes if you haven't found a GPS signal yet. • After you turn on your device for the first time, it may take up to 5 minutes to establish a connection.	• The compass calibration runs automatically in the background. • In Search-Mode, you can improve the calibration at any time by rotating the device around all axes for a few seconds (manual calibration). • Keep your device away from magnets and speakers! They can throw off the calibration.

Additional Modes:

Press and hold the **Home-Button** to access the **Additional Modes**.

Press the **Home-Button** to exit the **Additional Modes**.


Battery	Flashlight	Clock

Battery Mode:

This shows your current battery level. The fuller your battery is, the more LEDs will light up green. The image shows a battery level of 60%.

With a full charge, your device should last about 5 days if you use Search-Mode a few times a day.

When the battery is almost empty, the battery LED above the charging port flashes red.

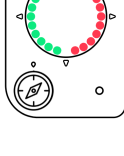

Clock Mode:

Hour: Red dot | **Minute:** Orange dot (blinking)

The clock in the picture currently reads 4:05 p.m.

Set the time: Press and hold the **Center-Button** for 3 seconds. The outer LEDs will flash blue. Set the hour by clicking the **Center-Button**. The minutes are always set automatically via the GPS signal. Save the settings by holding down the **Center-Button** again for 3 seconds.


Note: If the red dot is spinning, your Buddycompass hasn't received a GPS signal yet.



SOS Mode:

Quickly press the **Center-Button** 20 times in a row. Your device will then start flashing red, and the GPS LED will flash in your color. You are now sending an SOS signal to your group. On the other devices in your group, the GPS LED will now flash in your color to indicate that you need help. They can then simply switch to Search-Mode and find you.

Press the **Home-Button** to exit SOS-Mode.

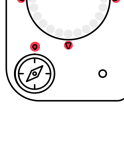

Here's how to update your Buddycompass:

We are constantly working on the software to fix bugs and add new features. We'll keep you informed about new updates via email and at <https://Buddycompass.shop/update>.

Here's how the update works:

- 1) Enter battery mode.
- 2) Press and hold the Center-Button for 5 seconds. The LEDs will display a white animation.
- 3) Connect your device to a PC. It will appear as a regular USB flash drive.
- 4) Download the latest firmware using the link above and copy the file to the "flash drive."
- 5) The direction of your Buddycompass will flash green when the update is complete!

Miscellaneous:

To turn on/off: Press and hold the **Home and Center-Buttons** simultaneously for 3 seconds.

Overwriting a Pairing: Your Buddycompass can pair with up to 8 other devices—that's why there are 8 "color slots" in pairing mode. Scenario 1: Let's say you're Buddy A (green) and Buddy B (orange) pairs with you. He'll then be saved in the orange slot. If you (or another Buddy) now want to pair with the color orange as well, the orange slot where Buddy B was saved will be overwritten.

Factory Reset: Delete all paired devices → Enter Flashlight-Mode, then press and hold the **Center-Button** for 10 seconds. Your device will start flashing red—just keep holding the button for another 5 seconds. The LEDs will then stay lit red. Your device will turn off, and all data will be erased.

Our promise to you:

We're doing everything we can to develop the best festival tracker on the market—with a lot of passion from our small team!

Since this is our first product, we realize that it may not be perfect yet or that you may have questions as you use it. If you encounter any issues, need help using the product, or would like to give us feedback, please feel free to contact us at hello@Buddycompass.shop. We'll be happy to help you!

And last but not least: Have a blast! Enjoy getting lost for a while, and celebrate the moment when you find your festival crew again! That's exactly what Buddycompass is all about: roaming freely, but always keeping your favorite people close by. ❤️

Troubleshooting:

My Buddycompass won't turn on:

• The battery might be dead. Please charge your Buddycompass!

The compass is pointing in the wrong direction:

• Are you outdoors with a clear view of the sky? Indoors, the GPS location is significantly less accurate.

• Please perform a manual compass calibration (rotate the device around all axes while in Search-Mode).

• Keep the Buddycompass away from magnets (speakers, keychains, etc.).

I can't find my Buddies / The search is taking a very long time:

• Without a GPS signal (the GPS LED is flashing), you won't be able to find your Buddies. (Your Buddies also need a strong GPS signal.)

• It may take up to 60 seconds for a Buddycompass to enter standby mode (the device is on, but the LEDs are off).

• Please check to make sure you're paired correctly by repeating the setup steps.

In Pairing-Mode, my Buddycompass shows more Buddies than there are in my group:

• Another group in your area may be pairing at the same time. In that case, exit pairing mode and perform a factory reset to delete all paired devices. Wait 10 minutes, and then try again.